




Home Radon Test Checklist

Helpful tips for testing your home's radon level
see your test kit for full instructions



Mark your calendar

- Create closed-house conditions 12 hours before starting the test (see tips below).
- Schedule the test to last 3 days to 7 days in closed-house conditions.
- Avoid testing during severe weather, such as hard rain, heavy snow or strong winds.

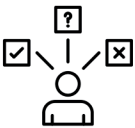

Decide where to test

- Test a location on the lowest level of the home you spend time in.
- Hang test at least three feet from windows, exterior doors and heat/air conditioning (AC) vents.
- Hang test in the "breathing zone" two to five feet off the ground between knee and eye level.



Avoid hanging test on exterior walls or areas with:

- Direct drafts or airflow from fans and heating or AC vents.
- Direct sunlight and near heat sources such as stoves, fireplaces and baseboard heaters.
- Moisture or high humidity like kitchens, bathrooms, laundry rooms or damp basements.

How to create closed-house conditions

- 12 hours before** and **during** the test period:

Make sure all windows and doors are closed, except for normal entry and exit.
Close fireplace dampers.
Avoid use of fans or other units that pull in air from outside.
Avoid running attic, ceiling, window or floor fans.

- During the test, it is **okay** to:

Run heating and AC systems. Set AC units to recycle or recirculate air only.
Use small exhaust fans such as kitchen or bathroom fans; if needed.
Run radon reduction system fans, if you have them.






Home Radon Test Checklist

Helpful tips for testing your home's radon level
see your test kit for full instructions



Begin testing your home

- Use a blue or black pen (not pencil) to record on your kit:
- test start date and hour
- room temperature
- and other requested information including your name, address and contact information
- Or enter the information digitally using the kit's QR code.
- Place the kit in the location that was decided upon.
- Do not move the test once testing is started.



After testing is complete

- Use a blue or black pen to record the test end date and hour and answers to any remaining questions on your kit.
- Remove the cardboard insert and immediately seal the kit.
- Promptly send the sealed kit to the lab in the pre-paid envelope provided.



Await results and follow recommendations

- In approximately two weeks, you will receive the results of your radon test.
- Review the results and recommendations.
- If high radon levels are found, contact a certified radon reduction contractor.
- Breathe easier knowing your indoor radon levels have been tested and addressed.

If radon levels are high, talk to a certified radon reduction contractor about options for reducing radon levels in your home.

Follow this link to a list of contractors certified by the National Radon Proficiency Program (NRPP): <https://nrpp.info/pro-search/>